



# Asus Eee PC 1005PEB RAM Replacement

Replacing the RAM in Asus Eee 1005PEB laptop

Written By: Aaron Arenas



## INTRODUCTION

The RAM is located under the plastic casing of the laptop. Before starting the guide, make sure the laptop's charger is not plugged in.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-



## Step 1 — RAM




- Start by having the laptop upside down on a hard flat surface.
- Find and unscrew the 6.65 mm Phillips #1 screw.
- ⓘ The screw will not detach from the RAM cover.

## Step 2



- Carefully remove the cover by lifting it with your fingers.

 Make sure that you do not pull the cover too quickly or too hard as this could damage the plastic pins that hold the cover on.




## Step 3



- Identify the pins on both sides of the RAM.
- Using both hands, pull the pins apart from each other to release the RAM.
- ⓘ The RAM will "pop" up on its own after the pins are pressed.

## Step 4

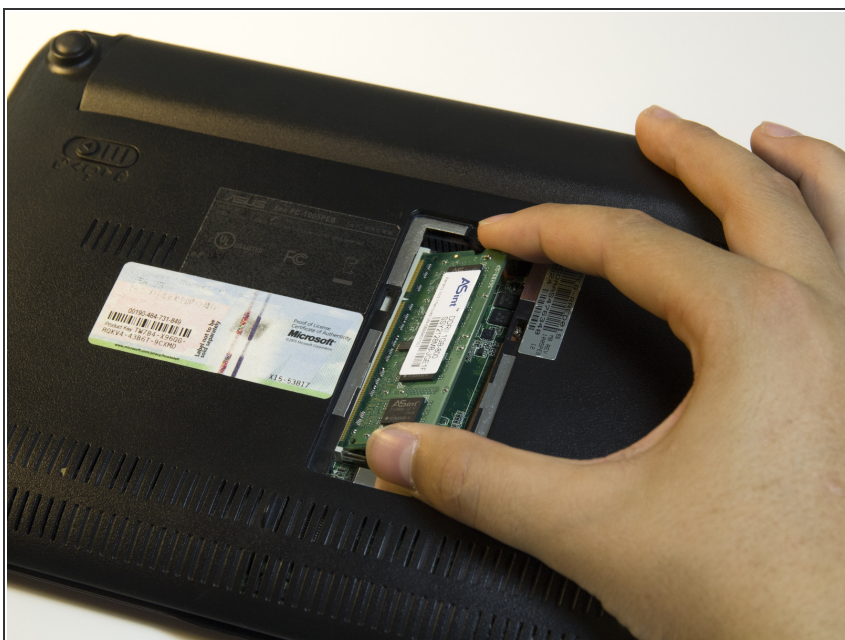

- Grab the RAM stick with two fingers and gently pull it out of its slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-02 02:30:50 AM.